## **DESCRIPTION**

**RUST SHIELD** is a special labor-saving formulation designed to replace costly, labor intensive rust removal procedures. The simple one-step, no rinse process completely protects metal surfaces. **RUST SHIELD** is ideal for use on most metal surfaces; testing for sensitivity on a small area is recommended.


# **DIRECTIONS**

#### Paint On Method:

Use **RUST SHIELD** full strength or in dilution up to one (1) part **RUST SHIELD** to three (3) parts water. Remove heavy or flaky rust with wire brush or scraper. Apply freely to surface using brush, cloth or roller. Cover all parts. Allow parts or surfaces to air dry without rinsing. Treated area may be painted immediately after drying if desired.

#### Soak Tank Method:

Use **RUST SHIELD** full strength or in dilution up to one (1) part **RUST SHIELD** to three (3) parts water. Submerge parts to be cleaned and allow to soak for one hour or longer, depending on the condition of the metal. Do not soak parts longer than necessary to clean metal. Moderate agitation is not essential but may be helpful in some cases. Remove parts and drain. Allow to air dry without rinsing. Solution may be reused if proper strength is maintained.

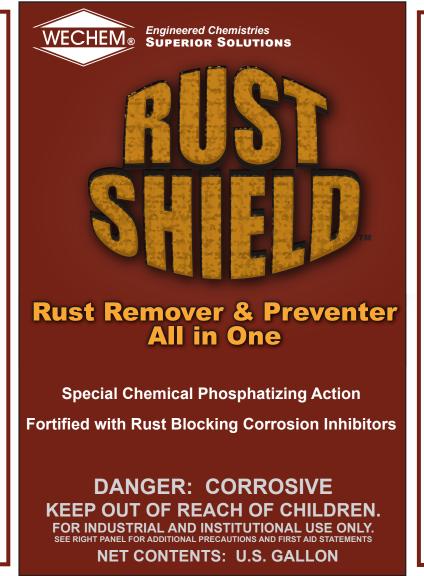





### **DANGER:**

Corrosive liquid. May be harmful if swallowed. Causes severe skin burns and eye damage. May cause respiratory irritation. Do not mix with anything but water.

Read label before use. Do not breathe dust/fume/gas/mist/vapors/spray. Do not get in eyes, on skin, or on clothing. Wear protective gloves/protective clothing/eye protection/face protection.

**IF SWALLOWED**: Immediately call a POISON CENTER or doctor/physician. Rinse mouth. Do NOT induce vomiting.

**IF ON SKIN (or hair)**: Remove/Take off immediately all contaminated clothing. Rinse skin with water/shower. If skin irritation occurs: Get medical advice/attention.

**IF INHALED**: Remove victim to fresh air and keep at rest in a position comfortable for breathing. Call a POISON CENTER or doctor/physician.

**IF IN EYES**: Rinse continuously with water for several minutes. Remove contact lenses if present and easy to do. Continue rinsing. Immediately call a POISON CENTER or doctor/physician.

### **READ SAFETY DATA SHEET BEFORE USE.**





SCAN FOR SDS

WECHEM, INC. 5734 Susitna Dr. • Harahan, LA 70123 504.733.1152 • 1.800.426.0512 FAX 504.733.2218 • www.wechem.com

